


**NOTE:**

1. CONTRACTOR SHALL VERIFY THAT PLANTING PIT IS FREE DRAINING PER SPECIFICATION PRIOR TO PLANTING.
2. REMOVE ALL BINDINGS AND BURLAP FROM THE TOP 1/3 OF ROOT BALL. PLACE ROOT BALL ON UNEXCAVATED OR COMPACTED SOIL.

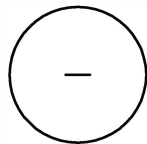

## SHRUB PLANTING DETAIL

NO SCALE



THE UNIVERSITY OF  
**CHICAGO**

FACILITIES SERVICES