


NOTES:

1. CONTRACTOR SHALL VERIFY THAT PLANTING HOLE IS FREE DRAINING PER SPECIFICATION PRIOR TO PLANTING.
2. DO NOT HEAVILY PRUNE THE TREE AT PLANTING. PRUNE ONLY CROSSOVER LIMBS, CO-DOMINANT LEADERS, AND BROKEN OR DEAD BRANCHES.
3. MARK THE NORTH SIDE OF THE TREE IN THE NURSERY, AND ROTATE TREE TO FACE NORTH.

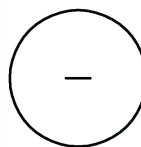

DECIDUOUS TREE PLANTING DETAIL

NO SCALE